

PROGRAMMING NOTE: *FlashBox is unprogrammed and locked by default. CyberBox is unprogrammed and unlocked by default. We recommend programming the FlashBox/CyberBox prior to installation. Instructions for programming are located in **Context Help** of CyberAudit-Web (<https://cyberauditweb.com/cawdocs>)*

1. Open the FlashBox/CyberBox. The four mounting holes are shown in Figure 1.

The wall gasket can be used as a template to drill appropriate mounting holes in the mounting surface.

If necessary, additional holes may be drilled anywhere in the back wall that will not interfere with the operation of the FlashBox/CyberBox. Corresponding holes will need to be made in the wall gasket.

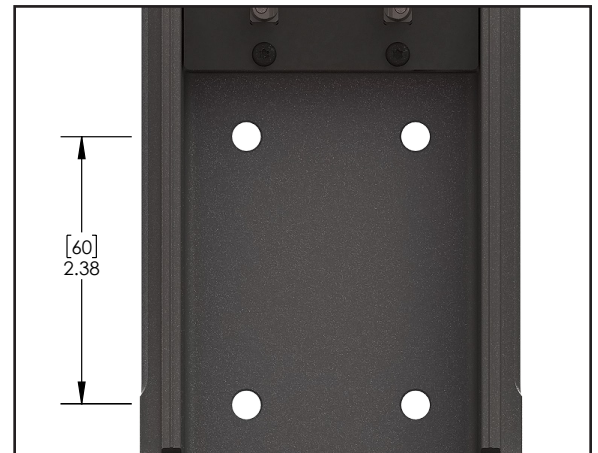


Figure 1: *Mounting Hole Locations*

2. Place the wall gasket on the back of the FlashBox/CyberBox and secure the unit to the wall using appropriate mounting screws. See Figure 2.



Figure 2: *Wall Gasket*

3. Add keys or other items to be secured to the box and close the lid.



Figure 3: *Installation Complete*